

Continue



Kenmore connect washer owners manual

Kenmore connect washer manual. Kenmore connect front load washer manual. Kenmore connect manual. Congratulations on purchasing your new Kenmore Elite Top-Loading Automatic Washer! This user guide provides important safety instructions, features, and benefits to ensure safe and efficient use. ****Important Safety Instructions**** * Always read and obey all safety messages in this manual and on the appliance. * Use a grounded 3-prong outlet and never use harsh chemicals or abrasive cleaners to clean the washer. * Ensure proper grounding before use and avoid putting oily or greasy rags or clothing on top of the washer. ****Grounding Requirements**** * Connect electricity using a 3-prong grounding type wall receptacle. * Verify proper ground exists before use. ****Key Parts and Components**** * Ultra-large stainless steel tub for extreme durability * Soft close hinges for gentle and quiet lid closing ****Installation Requirements**** * Dimensions: 27 in. (W) X 28 in. (D) X 45 in. (H), 56 in. (H with lid open) * Net Weight: 145.7 lbs. ****Unpacking and Removing Shipping Materials**** * Carefully remove the washer from its carton base, ensuring the plastic tub support comes off with the base. * Protect the side of the washer when laying it down to remove packaging materials. ****Connecting the Water Lines**** * Attach the red hot water line to the hot water inlet on the back of the washer. * Attach the blue cold water line to the cold water inlet on the back of the washer. ****Installing the Drain Hose**** * Connect the drain hose to the laundry tub drain line and standpipe tie strap. **WARNING:** Before operating this washer, read the entire Use & Care Guide, including Important Safety Instructions. **INSTALLATION INSTRUCTIONS:** Level the washer by adjusting it side to side and front to back. Lowering or raising the washer may be necessary. **CONTROLS:** * Start/Pause button: Press to start the selected cycle, pause if the washer is running. * Power (ON/OFF) button: Press to turn the washer ON or OFF. **LAUNDRY SORTING AND LOADING:** 1. Sort laundry by fabric type, soil level, color, and load size as needed. 2. Open the door and load items into the washer. **CYCLE GUIDE:** The cycle guide shows default settings, available options, and recommended fabrics for each cycle. **FABRIC CARE LABELS:** 1. Adjust cycle and option selections according to manufacturer's recommendations. 2. Do not wash water-resistant items if possible. 3. Sort clothes into loads with similar items for best results. **DISTRIBUTION OF LAUNDRY PRODUCTS:** 1. Add detergent, bleach, and fabric softener to the automatic dispenser. 2. Open the dispenser drawer, load products into compartments, and close before starting the cycle. **TIME AND STATUS DISPLAY:** The display shows estimated time remaining and cycle progress. LEDs will illuminate for selected cycles, blinking during active stages. LED indicator will only illuminate if a selection has been allowed. **WASH TEMP SPIN SPEED & WASH TEMP** determines the wash and rinse temperature. ****How to Use Option Buttons**** The washing machine offers customizable cycles to cater to individual preferences. Turn ON the washer, then select the desired cycle using the cycle selector knob. If you change the cycle selection after setting options, all settings will revert to default for the new cycle. ****Using Option Buttons**** Activate this option to disable controls. The washer can only be locked during a cycle. This feature prevents children from altering cycles or operating the machine. Once control lock is set, it must be deactivated before using any controls except the power button. ****Care and Cleaning**** Regularly clean your washer to extend its lifespan. Clean your washer if it won't be used for an extended period and is exposed to freezing temperatures or debris buildup. Note that inlet screens protect delicate parts from damage caused by particles in the water supply. For proof of purchase, defective appliances can be repaired or replaced free of charge at the seller's discretion. To learn more about warranty coverage and initiate a repair or replacement, visit www.kenmore.com/warranty . This limited warranty is valid for 90 days from the date of sale in the United States and does not apply to commercial use in Canada.