

Continue



Moultrie game cameras manual mcg 13129

Moultrie mcg-13239 manual. Moultrie mcg-13201 manual. Moultrie mcg-12634 manual. Moultrie model mcg-13201 manual. Moultrie mcg-13270 manual. Thanks for purchasing the Moultrie A-Series Digital Game Camera! Before using it, please read this booklet. If you have any questions about this product or others by Moultrie, visit www.moultriefeders.com/warranty to register your camera and activate your warranty. Quick Start Instructions: 1. Install 8 AA Alkaline or Lithium batteries in the camera cover, ensuring the (+) and (-) polarities match those inside the battery chamber. Remember to power off the camera before loading or unloading batteries. 2. Insert an SD memory card (up to 32 GB) into the front cover, aligning it with the direction indicated on the card until you hear a click. 3. Power ON the camera by sliding the Mode Switch to the Setup position and wait for the battery level display to appear. Mounting: 1. Place the camera on a tree or pole approximately 3 ft high and secure it using the mounting strap. 2. Face the camera down the trail, tilted slightly downward, and away from direct sunlight to avoid overexposure. Clear brush away from the front of the camera to prevent false triggers from wind. Camera Setup: 1. Power ON the camera by sliding the switch to the ON position and wait for the countdown display to appear. 2. If the battery level drops below 15%, the Low Battery screen will appear, and the camera will turn off. To modify settings, slide the switch to the SETUP position. 3. Use the UP/Down arrow keys to adjust options and press OK to lock in changes. Note that the motion sensor may detect movement while in SETUP mode, causing the STATUS LED to flash. Setting Time and Date: 1. In Setup mode, use the OK button to select the time option, then adjust using the UP/Down buttons. 2. Press OK to lock in the selection and move to the next one to set the year, month, and day. Detection Delay Setting: 1. Adjust the Detection Delay by pressing OK and selecting between 0, 15, 30 seconds, or 1-5 minutes. 2. Use the UP/Down buttons to choose your desired delay time and press OK to lock in the selection. Capture Mode: 1. Select from one of five capture modes using the UP/Down buttons: 1 Photo/Low. Camera Settings: You can choose from various camera modes, including Photo/High Resolution, 3 Photos/Low Resolution, 3 Photos/High Resolution and High/Low Video. Use the on-screen icons to select each mode. Camera ID: Identify your cameras with numbers (1-9) using the Up/Down buttons. Press OK to confirm and move to the next selection. Reset Picture Count: Reset file number to start from 0001 and erase all images stored on the SD card by choosing "Yes" and pressing OK. This will also format your SD card for use in your camera. Battery Information: Use only Alkaline or Lithium batteries, preferably Energizer batteries. Always replace all batteries at the same time and remove them when not in use. Limited Warranty: Moultrie Limited Warranty guarantees this product against defects in material and workmanship for 2 years from date of purchase. Contact our Customer Service Department to activate your warranty and register your camera online. Troubleshooting: Visit www.moultriefeders.com/contact-us for troubleshooting tips and helpful information. For returns and repairs, visit the same website or call our Service Department at 800-653-3334 (Monday - Friday, 8:00 AM to 5:00 PM CST). MOULTRIE MOBILE COMPATIBILITY: Your camera is compatible with Moultrie Mobile cellular service when combined with the Field Modem MV1. Visit www.moultriemobile.com for more information. FCC STATEMENT: This device complies with Part 15 of the FCC Rules and operates subject to certain conditions. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. In this particular installation, if the device causes harmful interference to radio or television reception, users can determine this by turning the equipment off and on. To correct the interference, they are encouraged to try one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, or consult the dealer or an experienced radio/TV technician for help. The Moultrie A-Series Game Camera user manual provides instructions on how to set up the camera, reset it, and troubleshoot common issues. To set up the camera, turn it ON, press the MENU button once to change to SETUP Mode, connect the USB cord between the USB out port and a PC computer, and recognize the camera as a removable drive. To reset the camera, remove the batteries and SD card, turn the camera on for one minute, and then insert the batteries and SD card. Some common issues with the Moultrie A-Series Game Camera include it not taking pictures, which can be resolved by checking the batteries and installing fresh ones if necessary. The camera is turned ON/OFF by sliding the Mode Switch to the Setup/Capture position, respectively. To take a picture, slide the Mode Switch to the Capture position and listen for a beep once the picture has been taken. The internal battery calculators inside game cameras are calibrated to read the voltage put out by alkaline or lithium batteries, which can cause issues with rechargeable batteries. Users can test their camera by connecting it to Moultrie Mobile, turning it ON, and observing the BATTERY and SD CARD lights. The camera may display a "no signal" message if the signal is weak and the batteries are low. Finally, users who start seeing black night photos or pink daytime photos can reset the infrared (IR) filter on their Moultrie Trail Camera to resolve this issue. To get crystal-clear photos from your Moultrie camera, double-check that you're using the recommended batteries and SD Card. Can you access your Moultrie camera through your phone? There are multiple ways to connect your device: use an SD card reader, USB cable, Bluetooth, WiFi, or more. Beforehand, it's crucial to research which solution works best for your device. To link your Moultrie camera to your modem, simply plug the micro USB end into the camera's port and ensure the rubber gasket fits snugly; then, connect the other end to the Field Modem. Remember to properly insert the cable before mounting. Is your Moultrie camera functioning? First, confirm it's Active on your account, then go to the Devices tab from your gallery page - if activated, you should see it listed.